

GENUINE CARGO NET

INSTALLATION AND USER'S INSTRUCTIONS

Thank you for purchasing a genuine Mazda accessory.



Before removal and installation, be sure to thoroughly read these instructions.


Please read the contents of this booklet in order to properly install and use the cargo net.


Your safety depends on it.

Keep these instructions with your vehicle records for future reference.

WARNING

- There are several  **WARNING** and  **CAUTION** sections in this booklet concerning safety when installing or removing the cargo net. Always read and follow them in order to prevent injuries, accidents, and possible damage to the vehicle.

 **WARNING:** Indicates a situation in which serious injury or death could result if the warning is ignored.

 **CAUTION:** Indicates a situation in which bodily injury or damage to the vehicle could result if the caution is ignored.

- For areas indicating the tightening torque in this instruction manual, tighten to the specified torque using a torque wrench. For areas in which the tightening torque is indicated inside parentheses (), the tightening torque is indicated as a reference value, however tightening using a torque wrench is not necessary.
- Do not modify the cargo net.
- Do not install the cargo net in any way other than described in the following instructions.
- If in any doubt, please ask your Mazda dealer to install the accessory in order to prevent errors in installation.
- If you have any questions about the use of the accessory, ask your Mazda dealer for proper advice before using it.
- Mazda and its suppliers are not responsible for injuries, accidents, and damage to persons and property that arise from the failure of the dealer or installer to follow these instructions.
- To ensure safety and reliability of the work, installation, removal and disposal work done by an Authorized Mazda Dealership is recommended.
- Be careful not to lose removed parts, and be sure that they are kept free from scratches, grease or other dirt.

PART NAME: CARGO NET
PART NUMBER: 0000-8K-D33
VEHICLE: MAZDA MX-5

NOTE

To the dealer

- Please turn over these instructions to the customer after installation.

To the customer

- Keep these instructions after installation. The instructions may be necessary for installing other optional parts or removal of this accessory.
- Should the vehicle or this accessory be resold, always leave these instructions with it for the next owner.



GENUINE ACCESSORIES
INSTALLATION INSTRUCTIONS

PART NUMBER:
0000-8K-D33

CARGO NET


APPLICABLE MODELS:
2016 > MAZDA MX-5

PACKAGE CONTENTS


Cargo Net
Installation Instructions
Hardware Kit (Part Number: 0000-8K-D34)

Black Zinc 13mm Head
Self-threading Bolt

D-Ring

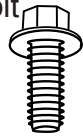

X2

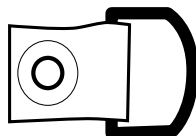

X2

TOOLS REQUIRED

Small, Flat-bladed Screwdriver
13mm Socket
Socket Wrench

1 Preparation

1. Open lift gate.
2. Locate the two mounting points in the underside of hatshelf area indicated by the arrows (Fig. 1). Two push-pin retainers visible outside the carpet liner, into holes in an aluminum body panel that will be used as mounting points for the net hardware.

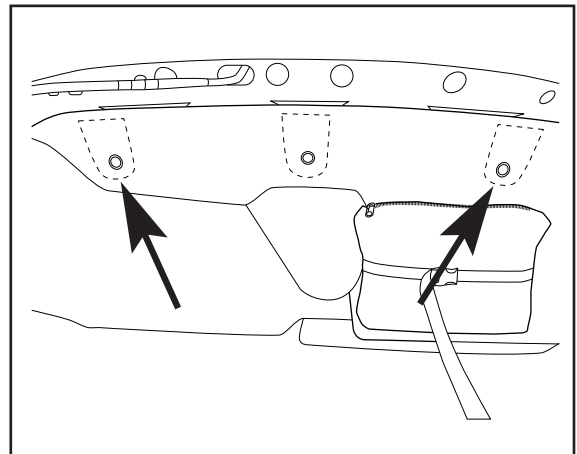


Fig. 1

2 Remove the Push-Pin Retainers

3. Remove the two push-pin retainers for each side of the trunk. (Fig.2) (The push-pin retainers will not be reused).

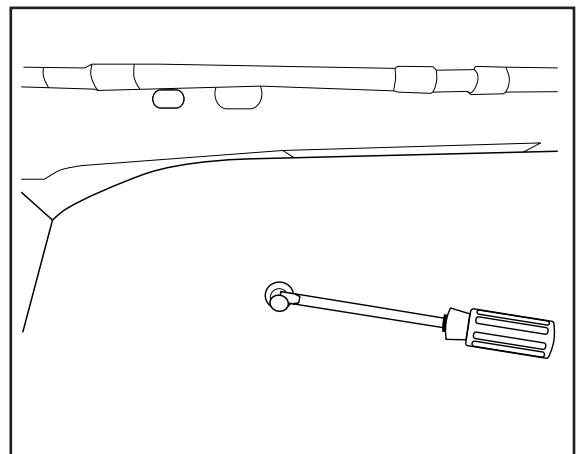


Fig. 2

3 Assembling Hardware

4. Insert Black Zinc 13mm head self-threading bolt into mounting D-Ring (x2) (Fig. 3).

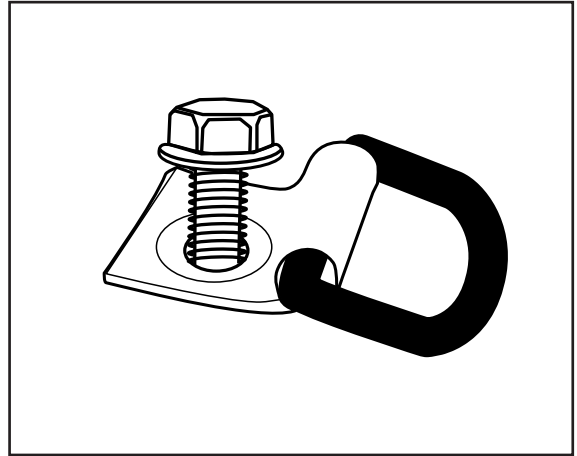


Fig. 3

4 Installation of D-Ring

5. Using 13mm socket to insert bolt/D-Ring assembly through the carpet liner into the aluminum body panel hole (Fig.4). Keep the bolt aligned with the hole, using firm hand pressure to thread the screw into the hole and **hand tighten snug** (x2).
⚠ **CAUTION:** Screws are threading into sheet aluminum panel. **DO NOT OVERTIGHTEN.**

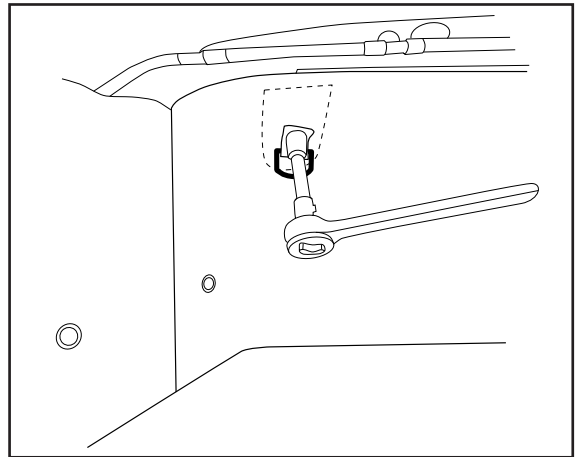


Fig. 4

5

6. Note orientation of D-Rings. (Fig. 5)
7. Install locking hook clips onto mounted D-Rings (x2) (Fig. 6).

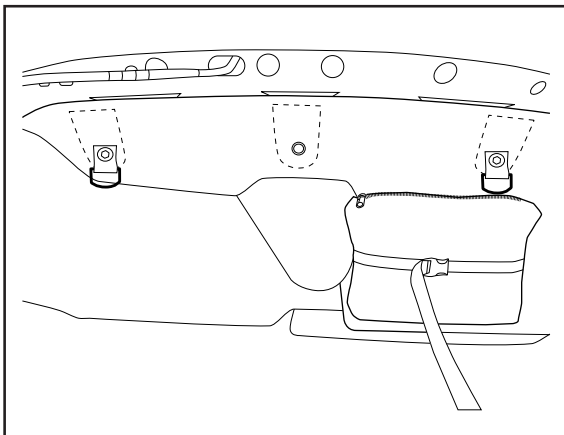


Fig. 5

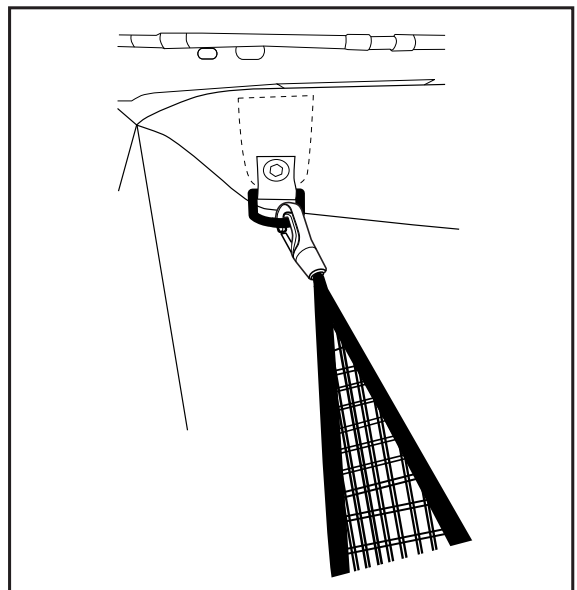


Fig. 6

6 Installed Net

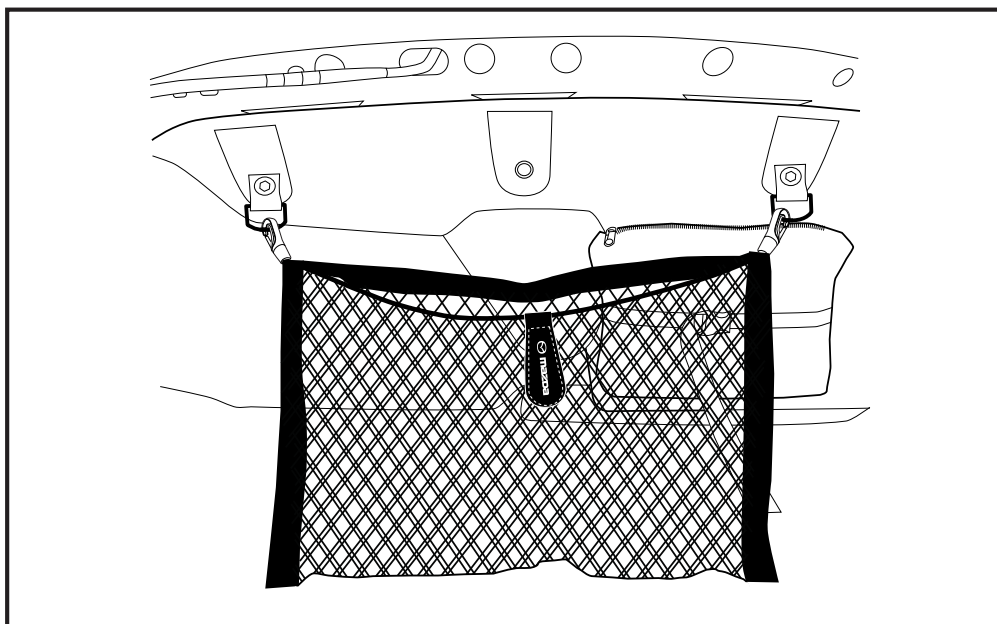


Fig. 7

7 Cleaning and Care

1. Hand wash using mild soap and warm water.
2. Do not machine wash.



WARNING: OBJECT(S) RESTRAINED NOT TO EXCEED 30 lbs. (13.6 kg)

CARGO NET INSPECTION SHEET

- Inspect the installed/reinstalled parts for the following items.
- Inspection parts differ depending on the vehicle body style.

MX-5

Inspection Parts	Inspection Items (●)			
	Clearance/Fit	Scratches/Debris	Installation/Tightening/Engagement	Operation Check
D-Rings	●	●	●	●
Cargo Net	●		●	●

● = Applicable

Date _____, _____, _____					
Vehicle. _____					
VIN. _____					
Approved		Checked		Person in charge	